

Share your best photos on social networks and tag us!



@wellpapers_com



WELLPAPERS.COM

**PRE-PASTED WALLPAPER
INSTALLATION GUIDE**

Customer service
9h30-18h30 Monday to Thursday
9h30-15h00 Friday
Call us on 09 78 45 21 06
or by email to contact@wellpapers.com

RECOMMENDED TOOLS



Spirit Level/Ruler



Pencil



Squeegee



Cutter

GOOD TO KNOW


We suggest **two people** for the installation.
Make sure the surface of your wall is **flat, dry, and clean.**

1° PREPARATION

Use a spirit level to check that your ceiling and walls are straight and, if needed, mark them with a pencil to help you.

Installation is done from **TOP** to **BOTTOM**.


If installing from left to right, use panel No. 1. (e.g., 1/4)
If installing from right to left, start with the last panel. (e.g., 4/4)

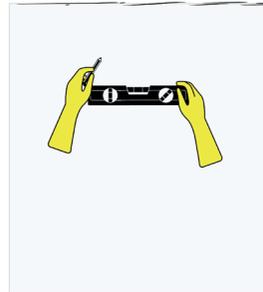

2° INSTALLATION


Check the order of your panels and grab panel #1.

Place the printed side of the panel on the floor.

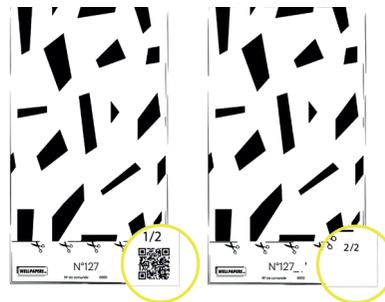

3° REMOVE THE LINER

Remove the liner on the back of the panel over its entire width, about 30 cm.

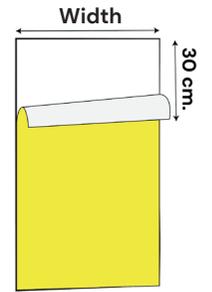

4° PASTE

Installation is done from **TOP** to **BOTTOM**.

Using a squeegee, stick panel #1 to the wall, pressing down from the centre to the sides to remove air bubbles, while continuing to peel off the liner as you go.




5° EDGE TO EDGE

Stick the second panel edge to edge.

To align it perfectly, you can peel and stick the panel again until you get a perfect result.


Repeat with the next panels.

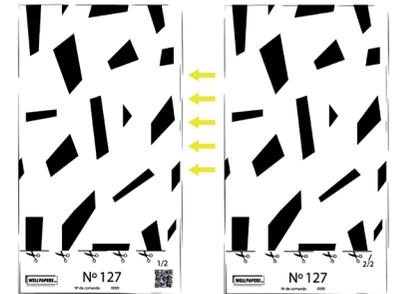

6° FINISHES

It's time to cut the label and excess paper with a cutter and a ruler.

That's it!

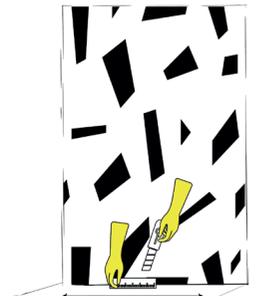

Share your prettiest photos
on social media and tag us!



@wellpapers_com



WELLPAPERS.COM

INSTALLATION GUIDE
PRE-PASTED NON WOVEN WALLPAPER

Customer Service

Monday to Thursday: 9:00 AM – 6:00 PM

Friday : 8:00 AM – 3:00 PM

Contact us:

Phone : +33 9 78 45 21 06

Email: contact@wellpapers.com

RECOMMENDED TOOLS



Bubble level Ruler



Pencil



Water Sprayer



Wallpaper Smoother Tool



Sponge



Cutter



Installation Video

IMPORTANT TO KNOW



We highly recommend that at least **two** people be present during installation. Cover your floor with a **protective tarp** and make sure that the surface of your wall is **flat, dry, and clean**.

1° PREPARATION




Using a bubble level, ensure that your ceiling and walls are straight. If necessary, mark lines for guidance with a pencil.

The wallpaper is applied from **TOP** to **BOTTOM**.

We recommend installing the wallpaper from left to right but :

If installing from left to right, use panel No. 1. (e.g., 1/4)


If installing from right to left, start with the last panel. (e.g., 4/4)

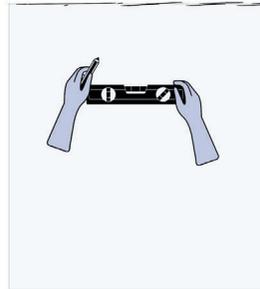

2° SETTING UP

Organize your panels in order and take panel No. 1.

Lay the panel print side down on the protected floor.

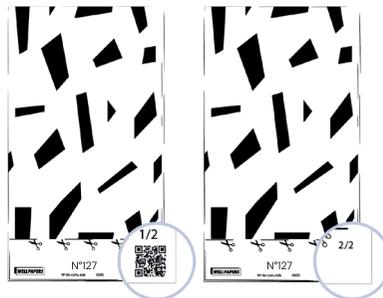


3° SPRAYING



Generously spray water on the back of the panel to activate the adhesive.

Be sure to cover the entire surface, including the edges.

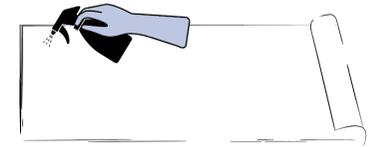


4° APPLYING



Again, the installation is done from **TOP** to **BOTTOM**.

Using a wallpaper squeegee, smooth the panel from the **center towards the edges** to eliminate air bubbles.

Use a sponge to clean off any excess adhesive.

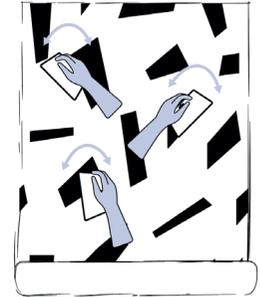


5° EDGE TO EDGE

Apply the second panel **edge to edge**.

For proper **alignment**, reposition panel No. 2 gently while the adhesive is still wet (it slides on the wall).

Repeat the operation with the following panels.

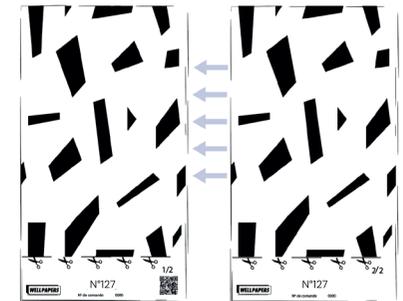


6° FINISHING TOUCHES



It's time to cut off the label and any excess paper using a cutter and a ruler.

For a higher-quality finish, use the wallpaper seam roller to make the seams disappear. To do this, roll the tool from top to bottom and bottom to top over the wallpaper strips at the seam.

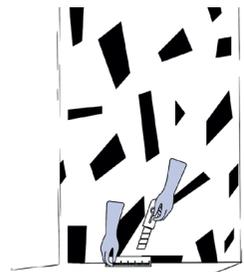

And there you have it!