

Share your prettiest photos
on social media and tag us!



@wellpapers_com



***WELLPAPERS*.com**

**INSTALLATION GUIDE
PRE-PASTED NON WOVEN WALLPAPER**

Customer Service

Monday to Thursday: 9:00 AM – 6:00 PM

Friday : 8:00 AM – 3:00 PM

Contact us:

Phone : +33 9 78 45 21 06

Email: contact@wellpapers.com

RECOMMENDED TOOLS



Bubble level
Ruler



Pencil



Water Sprayer



Wallpaper
Smoother Tool



Sponge



Cutter



Installation Video

IMPORTANT TO KNOW

We highly recommend that at least **two** people be present during installation. Cover your floor with a **protective tarp** and make sure that the surface of your wall is **flat, dry, and clean**.

1° PREPARATION

Using a bubble level, ensure that your ceiling and walls are straight. If necessary, mark lines for guidance with a pencil.

The wallpaper is applied from **TOP** to **BOTTOM**.

We recommend installing the wallpaper from left to right but :

If installing from left to right, use panel No. 1. (e.g., 1/4)


If installing from right to left, start with the last panel. (e.g., 4/4)



2° SETTING UP

Organize your panels in order and take panel No. 1.


Lay the panel print side down on the protected floor.

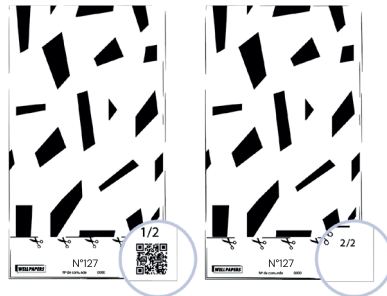

3° SPRAYING

Generously spray water on the back of the panel to activate the adhesive.

Be sure to cover the entire surface, including the edges.

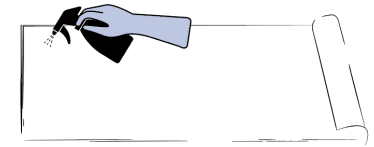


4° APPLYING

Again, the installation is done from **TOP** to **BOTTOM**.

Using a wallpaper squeegee, smooth the panel from the **center towards the edges** to eliminate air bubbles.

Use a sponge to clean off any excess adhesive.

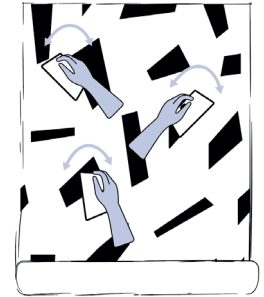


5° EDGE TO EDGE

Apply the second panel **edge to edge**.

For proper **alignment**, reposition panel No. 2 gently while the adhesive is still wet (it slides on the wall).


Repeat the operation with the following panels.

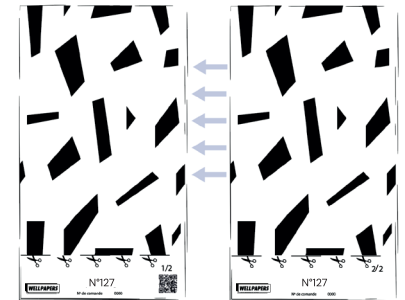

6° FINISHING TOUCHES

It's time to cut off the label and any excess paper using a cutter and a ruler.

For a higher-quality finish, use the wallpaper seam roller to make the seams disappear. To do this, roll the tool from top to bottom and bottom to top over the wallpaper strips at the seam.

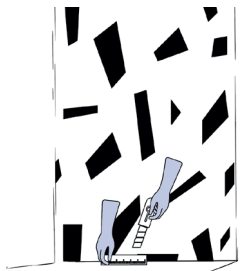

And there you have it!