Share your best photos on social networks and tag us!







Customer service 9h30-18h30 Monday to Thursday 9h30-15h00 Friday Call us on 09 78 45 21 06 or by email to contact@wellpapers.com

RECOMMENDED TOOLS









Squeegee



GOOD TO KNOW

We suggest two people for the installation. Make sure the surface of your wall is flat, dry, and clean.


1° PREPARATION



Use a spirit level to check that your ceiling and walls are straight and, if needed, mark them with a pencil to help you.




If installing from left to right, use panel No. 1. (e.g., 1/4) If installing from right to left, start with the last panel. (e.g., 4/4)

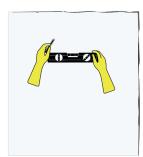

INSTALLATION


Check the order of your panels and grab panel #1.

Place the printed side of the panel on the floor.

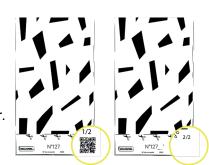

3° REMOVE THE LINER

Remove the liner on the back of the panel over its entire width, about 30 cm.





Installation is done from TOP to BOTTOM.

Using a squeegee, stick panel #1 to the wall, pressing down from the centre to the sides to remove air bubbles, while continuing to peel off the liner as you go.



EDGE TO EDGE

Stick the second panel edge to edge.

To align it perfectly, you can peel and stick the panel again until you get a perfect result.

Repeat with the next panels.





It's time to cut the label and excess paper with a cutter and a ruler.

That's it!

